



***Model S610 Digital
Counting Scale***

Operation & Calibration Manual

Revision 1.0
July, 2003

Contents subject to change without notice.

Salter Brecknell Weighing Products.
1000 Armstrong Drive
Fairmont, MN 56031
Tel (800) 637-0529
Tel (507) 238-8702
Fax (507) 238-8271

E-mail: sales@salterbrecknell.com

Web: www.salterbrecknell.com

Electromagnetic Compatibility Statement for Europe

PRODUCT	TC-100 Series	Directives with which this equipment complies:	
Harmonized Standards applied:		EMC 89/336/EEC	EMC Directive
		EMC 92/31/EEC	EMC Directive
		EMC 93/68/EEC	EMC Directive
EN 55022:1998		Class B	
EN 61000-3-2:1995 + A1:1998 + A2:1998			
EN 61000-3-3:1995			
EN 55024: 1998		EN 61000-4-2:1995 + A1:1998	
		EN 61000-4-3:1996	
		EN 61000-4-4:1995	
		EN 61000-4-5:1995	
		EN 61000-4-6:1996	
		EN 61000-4-8:1993	
		EN 61000-4-11:1994	
Year in which CE mark affixed	2001	Date of issue	Oct 2001

Electromagnetic Compatibility Statement for North America

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

TABLE OF CONTENTS

	<u>Page</u>
Chapter 1: Introduction to the Salter Brecknell S610 Series Digital Counting Scale.....	1-1
Chapter 2: Getting Started	2-1
Chapter 3: Basics of Operation	3-1
3.1 Display.....	3-1
3.1.1 Light Emitting Diode (LED) Display	3-1
3.2 Keyboard	3-2
3.2.1 Function and Numeric Keys	3-2
3.3 General Scale Operation	3-3
3.3.1 Weighing an Item	3-3
3.3.2 Taring an Item of Unknown Weight.....	3-3
3.3.3 Taring an Item of Known Weight.....	3-3
3.3.4 Clearing a Tare.....	3-3
3.3.5 Piece Counting	3-3
3.3.6 Clearing the Piece Count.....	3-4
Chapter 4: Advanced Features and Operation.....	4-1
4.1 Average Piece Weight (APW) Entry.....	4-1
4.1.1 Average Piece Weight (APW) Entry.....	4-1
4.2 Alternative Sampling Method.....	4-1
4.3 Memory Accumulator	4-1
4.3.1 Displaying the Memory Accumulator	4-1
4.3.2 Adding to the Memory Accumulator	4-1
4.3.3 Clearing the Memory Accumulator	4-1
4.4 Using the Target Value.....	4-2
Chapter 5: Configuration	5-1
5.1 Configuration Overview	5-1
5.2 Setup ("F") Menu	5-1
5.3 User ("A") Menu.....	5-1
5.3.1 Entering the User Menu.....	5-1
5.3.2 Navigating in the User Menu	5-1
5.3.3 Exiting the User Menu	5-2
5.4 User Menu Procedures	5-3
5.4.1 ID Number Entry (A8).....	5-3
5.4.2 LF (Line Feeds) Number Entry (A9)	5-4

Chapter 6:	Calibration	6-1
6.1	Calibration Overview	6-1
6.2	Calibration Mode	6-1
Appendix A:	Specifications	A-1
Appendix B:	Serial Port Information.....	B-1
B.1	COM1 Serial Port	B-1
B.1.1	Connecting the Serial Device	B-1
B.1.2	Default Print Format	B-2
B.1.3	Full Duplex Modes for COM1	B-2
B.1.3.1	Demand Mode.....	B-2
B.1.3.2	Continuous Mode	B-3
B.1.4	Transmit APW Mode	B-3
Appendix C:	Error Messages	C-1
C.1	Error Messages	C-1
C.1.1	Operator Errors	C-1
C.1.2	Calibration Errors.....	C-1

LIST OF FIGURES

1-1	S610 Series Front Panel	1-1
2-1	S610 Back Panel.....	2-1
2-2	Latitude Compensation Zones (USA)	2-2
3-1	S610 Display Detail	3-1
3-2	Function and Numeric Keys Layout	3-2
5-1	User Menu Key Assignments	5-1
5-2	User Menu Chart.....	5-2
B-1	Pin Assignments for COM1 Serial Port	B-1
B-2	Cable Diagram for Scale to Dot Matrix Printer	B-1
B-3	Cable Diagram for Scale to Computer	B-1
B-4	Default Print Format	B-2
B-5	Consolidated Controls Demand Mode	B-2
B-6	Consolidated Controls Continuous Mode.....	B-3

LIST OF TABLES

1-1	S610 Series Product Matrix.....	1-1
3-1	S610 Series Annunciator Definitions.....	3-1
3-2	S610 Sampling Limits	3-4
5-1	User Menu Descriptions	5-3
6-1	Minimum / Recommended Calibration Test Weights.....	6-2
B-1	Recognized Host Commands	B-2

CHAPTER 1: INTRODUCTION TO THE SALTER BRECKNELL S610 DIGITAL COUNTING SCALE

The Salter Brecknell S610 Series Digital Counting Scale is an easy to use, high-resolution counting scale featuring keyboard tare and APW entry. It is equipped with many useful features that are normally found on more expensive scale products, including memory accumulator and target values.

The scale is available in four avoirdupois weight capacities and four metric weight capacities. Table 1-1 shows the S610 series product matrix.

Prior to using the scale, please read this user's guide carefully and completely. Store the manual in a safe and convenient place so it will be available if you have questions concerning the operation of the scale.

MODEL	CAPACITY / GRADUATION	MODEL	CAPACITY / GRADUATION
S610-2	2 lb x 0.0002 lb	TC-100-1M	1000 g x 0.1 g
S610-5	5 lb x 0.0005 lb	TC-100-2M	2000 g x 0.2 g
S610-10	10 lb x 0.001 lb	TC-100-5M	5000 g x 0.5 g
S610-20	20 lb x 0.002 lb	TC-100-10M	10,000 g x 1 g

TABLE 1-1: S610 Series Product Matrix

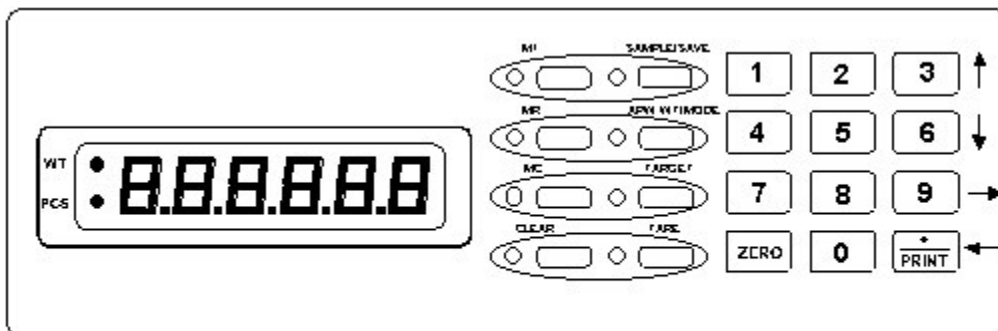


FIGURE 1-1: S610 Series Front Panel

CHAPTER 2: GETTING STARTED

After unpacking the scale, a small amount of preparation is required before the scale can be used. Please refer to Figure 2-1 below as needed.

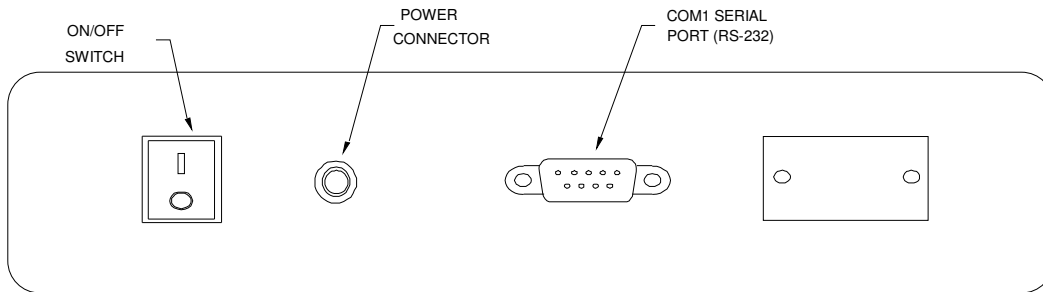


Figure 2-1: S610 Back Panel

Step 1. Position the scale in its area of intended use. Observe the following guidelines for suitable location.

1. Choose a firm, stable floor or table.
2. Do not share an AC outlet with electrical noise producing equipment, such as refrigeration units. This includes products with electrical motors and/or relays.
3. Do not place the scale in an area with changing ambient temperature and/or high humidity.
4. Do not place the scale in an area prone to exposure to direct sunlight, wind, or dust.
5. Do not place the scale in an area with vibrating equipment.

Step 2. Install the AC Adapter.

1. After placing the scale in its area of use, locate the AC Adapter.
2. Connect the male end of the AC Adapter to the connector on the rear of scale, and then plug the adapter into an AC outlet. **Make sure that the AC voltage appearing at the wall outlet matches the input voltage marked on the AC adapter.**

Step 3. If applicable, install the serial printer, remote scale or computer to the COM1 serial port.

1. Connect the printer or computer to the COM1 port using the optional serial cable. See Appendix B for cabling requirements and pinouts.
2. Configure the communication parameters and select the device type as detailed in Section 5.3.

Step 4. Turn the scale's AC power on to begin use. When the scale is switched on for the very first time, the message "d-ZonE" appears on the display. Press the numeric key corresponding to the correct geographic area in the map shown in Figure 2-2 then press the **SAMPLE / SAVE** key to save. **Note** – If there is no corresponding geographic area, enter "0" then press the **SAMPLE / SAVE** key. No gravitation adjustment will be performed.

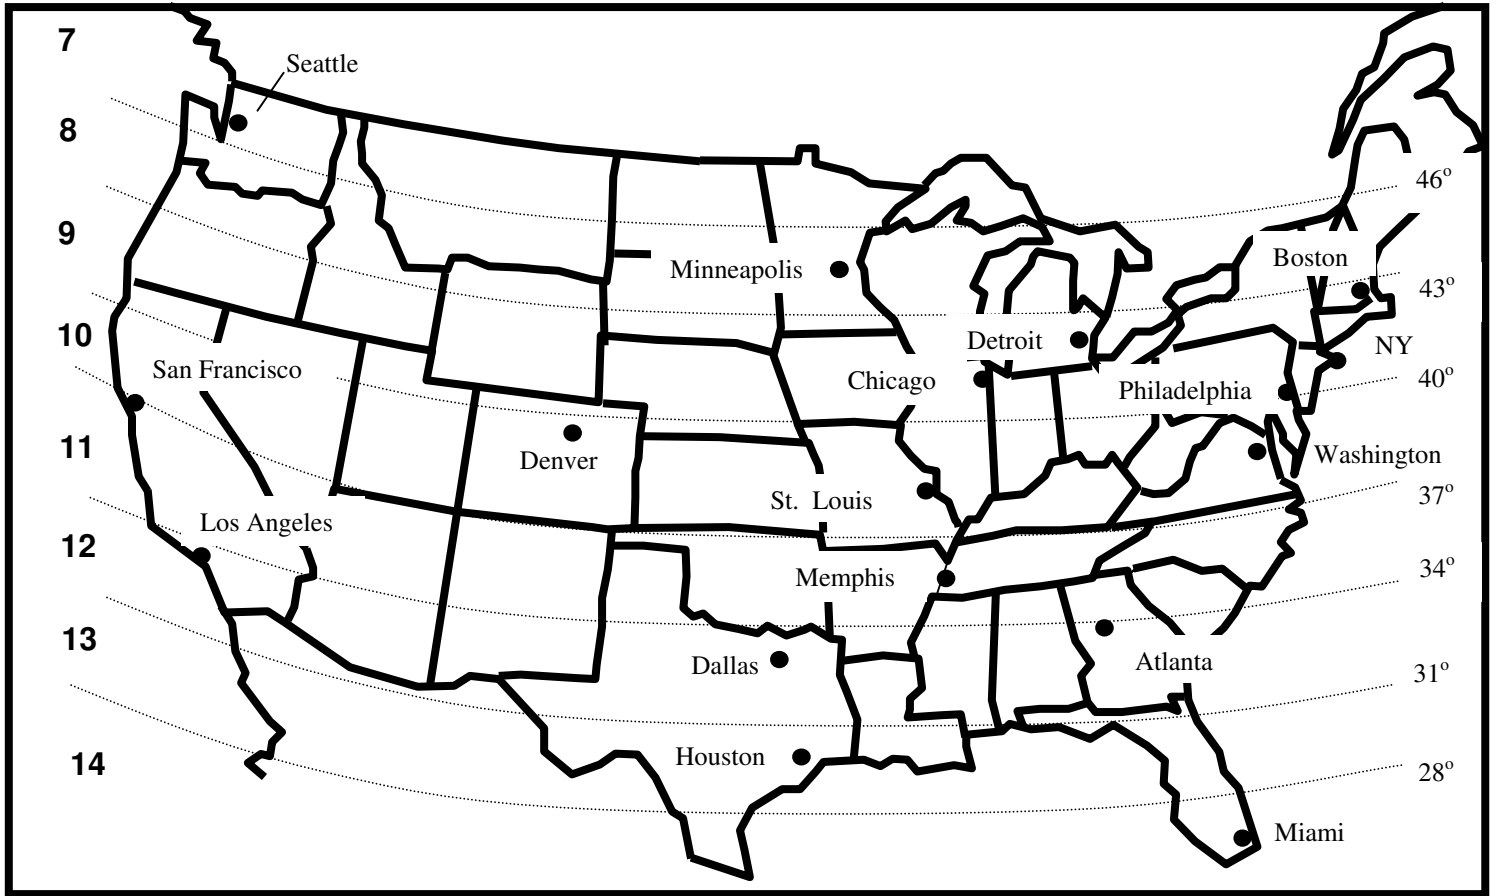


Figure 2-2 : Latitude Compensation Zones (USA)

CHAPTER 3: OPERATION

3.1 DISPLAY

The Model S610 scale utilizes a 6-digit LED (LIGHT EMITTING DIODE) screen to display the weight and system information.

3.1.1 LIGHT EMITTING DIODE (LED) DISPLAY

Figure 3-1 shows the display detail of the LED display. Table 3-1 lists the various annunciators you may see and their meanings.

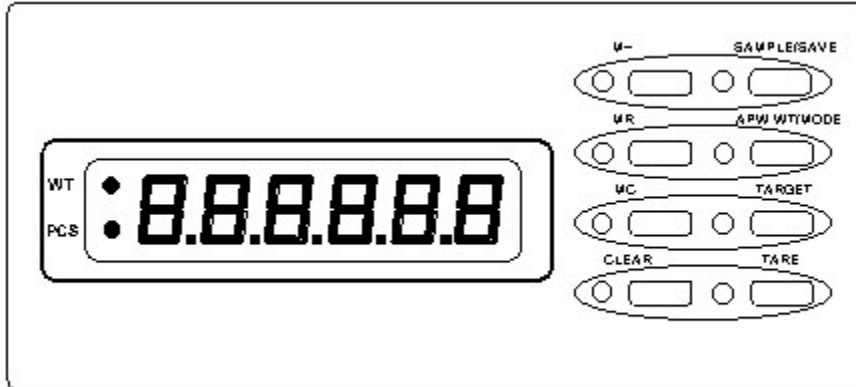


FIGURE 3-1: S610 Display Detail

Annunciator	MEANING
TARE	Indicates that a tare has been established in the system.
WT	Indicates that the displayed value is weight.
PCS	Indicates that the displayed value is the number of pieces currently on the platform. If a tare has been established, the scale will indicate the NET number of pieces.
APW WT	Indicates the Average Piece Weight of the pieces on the platform.
TARGET	Indicates that a value for check weighing has been entered.

TABLE 3-1: S610 Series Annunciator Definitions

3.2 KEYBOARD

The keyboard is composed of ten function keys and ten numeric keys. Refer to Figure 3-2 for the overall layout and key locations.

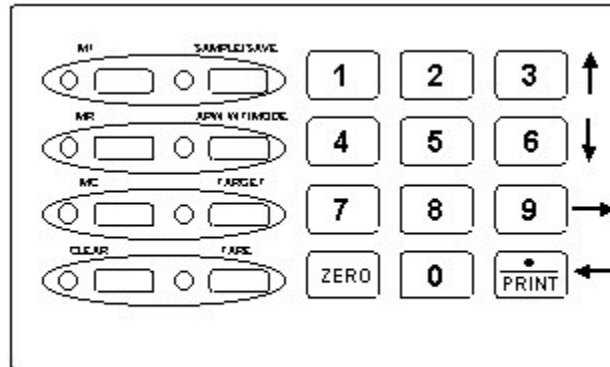


FIGURE 3-2: Function and Numeric Keys Layout

3.2.1 FUNCTION AND NUMERIC KEYS

Zero - This key sets the scale to display zero.

Decimal Point / Print - This key is used to send weight information out to the serial interface port provided the scale is in a state of stability. Otherwise, used as the decimal point key when entering numeric values.

Target- This key is used to set a target for filling and check weighing. Refer to Section 4.3 for more information.

Sample / Save – This key is used to sample the items currently on the scale's platter for piece counting. Refer to Section 3.3.5 for more information. This key is also used to save settings while in the system setup menus. See Chapter 5 for more information.

Tare - This key is used to establish a Tare provided the scale is not at or below Gross zero. See Sections 3.3.2 and 3.3.3 below for more information.

MC - This key is used to clear the piece count accumulator.

MR - This key is used to briefly display the contents of the piece count accumulator.

M+ - This key is used to add the currently displayed number of pieces to the piece count accumulator.

0-9 – These keys are used to enter numeric and alphanumeric data into the scale.

CLR - This key is used primarily to erase a keyed-in value from the display in case an error has been made. This key is also used to clear the current APW (Average Piece Weight) from the scale.

Unit Wt / Mode - This key is used to set a keyed-in value from the display as the new APW (Average Piece Weight). See Section 4.1 for more information. This key is also used to toggle the scale among the three displayed items: weight, pieces and APW.

3.3 GENERAL SCALE OPERATION

3.3.1 WEIGHING AN ITEM

1. Ensure that the WT annunciator is lit. If it is not lit, press the Clear key.
2. If necessary, press the Zero key to obtain a weight reading of zero.
3. Place the object to be weighed on the scale's platter and allow the weight indication to stabilize. If the item weight exceeds the scale's weight capacity, it displays "o o o o o".
4. Read the weight shown on the display.

3.3.2 TARING AN ITEM OF UNKNOWN WEIGHT

To weigh an item in a container, the weight of that container must first be subtracted from the overall weight to obtain an accurate weight reading. This is known as taring.

1. If necessary, press the Zero key to obtain a weight reading of zero.
2. Place the empty container on the scale's platter and allow the weight indication to stabilize.
3. Press the Tare key. The TARE light comes on and the scale displays a weight reading of zero.
4. Place the material to be weighed in the container and allow the weight indication to stabilize.
5. Read the weight shown on the display.

3.3.3 TARING AN ITEM OF KNOWN WEIGHT

If the weight of the container or object is known, you may enter this weight via the keyboard. This value must be rounded to the nearest scale division. For example, on a TC-100-10 scale, you must enter the tare weight value to the nearest 0.001 lb.

1. Using the numeric keys, key-in the known tare weight and press the Tare key. The display shows minus weight and turns the TARE annunciator on.
2. Place the material to be weighed in the container and allow the weight indication to stabilize.
3. Read the weight shown on the display.

3.3.4 CLEARING A TARE

1. To clear a tare, press the ZERO key at any time. The TARE annunciator disappears and the gross weight is displayed.

3.3.5 PIECE COUNTING

This mode is used to indicate the number of pieces of an item you have placed on the scale's platform. To ensure accuracy, the parts you are counting must be consistent in weight.

The scale uses the sampling method to determine the average piece weight (APW) of the items you wish to count. When sampling items, always count the parts in your hand and place them on the platform all at once. If the APW of the items is too light or the total weight of the sample is too light, accuracy cannot be guaranteed. You will get an error message, but piece counting will still be allowed. Consult Table 3-2 for minimum piece weights and sample weights.

1. If the items you will be counting require a container, you must first tare the container

off by pressing the TARE key. The scale switches to TARE mode and sets the displayed weight to zero.

2. Press the SAMPLE / SAVE key. Press the SAMPLE key. The scale displays “10” and is prompting you to place ten identical items on the platform.

NOTE: If you wish to change the sample number, simply press the SAMPLE / SAVE key repeatedly until the desired sample number appears. Available choices are 5, 10, 25, 50 and 100.

3. Place the sample items on the platform all at once.
4. Press the PRINT key. If the sample meets the limits shown in Table 3-2, the scale will now display the number of pieces on the scale. If it does not, the scale flashes the UNIT WT/MODE annunciator but still allows piece counting. If this occurs, you should use a higher sample amount to achieve better piece count accuracy. Please see Table 3-1 for an explanation of the error annunciators.

NOTE1 : If the scale displays a “Error 10” message, the unit weight of the items you wish to count is too light for your scale to process at all.

3.3.6 CLEARING THE PIECE COUNT

1. To clear the piece count, either press the CLEAR key to erase the sample or repeat the steps in Section 3.3.5.

MODEL	Capacity / Graduation	Minimum Piece Weight	Minimum Sample Weight
S610-2	2 lb x 0.0002 lb	0.00016 lb	0.003 lb
S610-5	5 lb x 0.0005 lb	0.0004 lb	0.0075 lb
S610-10	10 lb x 0.001 lb	0.0008 lb	0.015 lb
S610-20	20 lb x 0.002 lb	0.0016 lb	0.03 lb
S610-1M	1000 g x 0.1 g	0.08 g	1.5 g
S610-2M	2000 g x 0.2 g	0.16 g	3.0 g
S610-5M	5000 g x 0.5 g	0.4 g	7.5 g
S610-10M	10,000 g x 1 g	0.8 g	15.0 g

TABLE 3-2: S610 Sampling Limits

CHAPTER 4: ADVANCED FEATURES AND OPERATION

4.1 AVERAGE PIECE WEIGHT (APW) ENTRY

If you already know the Average Piece Weight or APW of the items you wish to count, then use the following procedure.

4.1.1 AVERAGE PIECE WEIGHT (APW) ENTRY

1. Using the numeric and decimal point keys, key-in the actual unit weight value.
2. Press the APW WT / MODE key. If the unit weight is large enough, the scale will now display the number of pieces on the scale. If it does not, the scale briefly displays an error message, but still allows piece counting. Please see Appendix C for an explanation of the error messages.

NOTE 1: If the scale displays a “Error 10” message, the unit weight of the items you wish to count is too light for your scale to process at all.

4.2 ALTERNATIVE SAMPLING METHOD

If you wish to use a non-standard sampling size, then use the following procedure.

5. If the items you will be counting require a container, you must first tare the container off by pressing the TARE key. The scale switches to TARE mode and sets the displayed weight to zero.
 6. Place the sample items on the platform all at once.
7. Using the numeric keys, key-in the number of items you have placed on the scale’s platter.
8. Press the SAMPLE / SAVE key. If the sample meets the limits shown in Table 3-2, the scale will now display the number of pieces on the scale. If it does not, the scale flashes the APW WT / MODE annunciator but still allows piece counting. If this occurs, you should use a higher sample amount to achieve better piece count accuracy. Please see Table 3-1 for an explanation of the error annunciators.

NOTE1 : If the scale displays a “Error 10” message, the unit weight of the items you wish to count is too light for your scale to process at all.

4.3 MEMORY ACCUMULATOR

Your scale comes equipped with a handy memory accumulator, which can be used in conjunction with the piece counting feature. As with a hand-held calculator, the memory accumulator can be added to, displayed and cleared at anytime.

NOTE: Make sure the scale is in piece counting mode. If it is not, follow the sampling procedure found in Section 3.3.5 or the alternative sampling procedure found in Section 4.2.

4.3.1 DISPLAYING THE MEMORY ACCUMULATOR

1. Press the MR key. The scale briefly displays the total number of pieces.

4.3.2 ADDING TO THE MEMORY ACCUMULATOR

1. Press the M+ key. The scale adds the current number of pieces to the memory accumulator.

4.3.3 CLEARING THE MEMORY ACCUMULATOR

1. Press the MC key.

4.4 USING THE TARGET VALUE

This function works in conjunction with the piece counting feature and allows your scale to act as a checkweigher. This is useful if you are filling a container with a pre-determined amount of items.

To use, you must enter a target value. For example, if you wish to fill a bottle with 100 items you would set your target value to 100.

If the number of items on the platform matches or exceeds the target value, the scale flashes its displayed reading.

1. First, make sure the scale is in piece counting mode. If it is not, follow the sampling procedure found in Section 3.3.5 or the alternative sampling procedure found in Section 4.2.
2. Use the numeric keys to key-in the target value then press the TARGET key.
3. Place items on scale until the scale signals that the items are equal to or greater than the target value.

NOTE: To exit the target function, press the TARGET key once.

CHAPTER 5: CONFIGURATION

5.1 CONFIGURATION OVERVIEW

The scale contains two main setup menus: The Setup (“F”) menu configures the factory settings for your scale. The User (“A”) menu configures the COM1 serial communication port and enables some user options. The Setup and User menus consist of several menu selections, each with its own sub-menu of choices.

To set up the scale, you must first enter the appropriate menu mode. Once there, four of the front panel keys become directional navigators to move around in the menus, and one key is used to save or SET the selections.

5.2 SETUP (“F”) MENU

The Setup (“F”) Menu is considered too technical for the operation guide. Please refer to the TC-100 Service Manual for complete coverage.

5.3 USER (“A”) MENU

5.3.1 ENTERING THE USER MENU

1. Toggle the ON/OFF switch to the OFF (0) position.
2. Press and hold the 8 key while powering back on the scale. When the scale shows “A 1” you are in User Menu mode and you may release the 8 key.

5.3.2 NAVIGATING IN THE USER MENU

Use the directional keys shown in Figure 5-1 to move around in the User Menu Chart shown in Figure 5-2 on the following page. Detailed descriptions of the User Menu can be found in Table 5-1.

1. To move to a new “A” heading, use the Print (left) or 9 (right) key to move right or left in the User Menu Chart.
2. To move to the selection level, press the 6 (down) key once. The current saved selection is shown.
3. To view the available selections for the current “A” heading, use the Print (left) or 9 (right) key to move through the selection field.
4. To save a new selection, press the SAMPLE / SAVE (Set) key. To exit without saving, press the 3 (up) key to return to the current “A” heading.
5. Repeat Steps 2 through 5 until the User Menu is programmed.

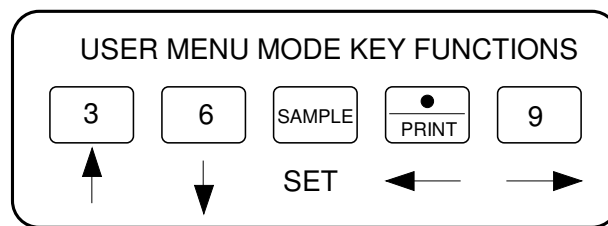


Figure 5-1: User Menu Key Assignments

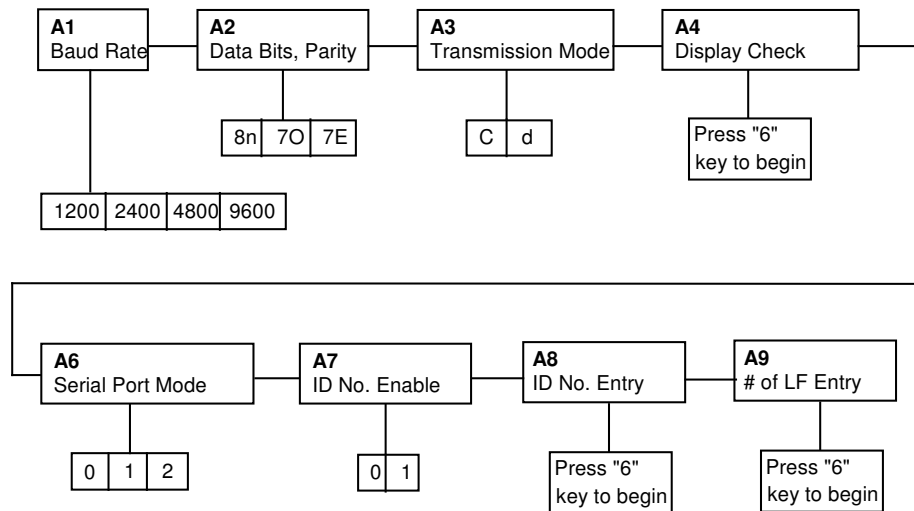


Figure 5-2: User Menu Chart

5.3.3 EXITING THE USER MENU

1. Toggle the ON/OFF switch to the OFF (0) position.
2. Turn the scale back on without holding down any keys. The display will go through a digit check, then settle into Normal Operating mode. All front panel keys will now return to their normal mode of operation.

NAME/CODE	DESCRIPTION	CODE/VALUE
A1 Baud Rate	Selects the baud rate for data transmission through the serial port.	1200 2400 4800 9600 ✓
A2 Data Bits and Parity	Selects the number of data bits and parity of serial transmission. "8n" = 8 data bits with no parity bit "7O" = 7 data bits with odd parity bit "7E" = 7 data bits with even parity bit	8n ✓ 7O 7E
A3 Mode of Serial Transmission	Selects when data will be sent out of the serial port to a printer or computer: "C" = Continuous mode; send data continuously "d" = Demand mode; send data when a PRINT command is issued from the printer, computer, or indicator.	C d ✓
A4 Display Check	Actuates the function that illuminates all digit segments, decimal points, and LED annunciators in a test sequence. Pressing the 6 key to scroll down one level begins the test sequence.	Press 6 key to begin sequence
A6 Serial Port Mode	Selects the mode of the RS-232C serial port: "0" = Full Duplex Mode "1" = Print Ticket Mode "2" = APW Transmit Mode	0 1 2 ✓
A7 ID No. Enable	Allows the ID No. to be disabled in the printout. Valid only when A6 is set to "1". "0" = Disable the ID No. "1" = Enable the ID No.	0 ✓ 1
A8 ID No. Entry	Actuates the function that allows entry of a new ID No. Valid only when A6 is set to "1". Pressing the 6 key to scroll down one level begins the sequence.	0 - 999999 (123456 is default)
A9 No. of Line Feeds	Actuates the function that allows entry of the desired number of line feeds to be printed after the printout. Valid only when A6 is set to "1". Pressing the 6 key to scroll down one level begins the sequence.	0 – 99 (5 is default)

Table 5-1: User Menu Descriptions

5.4 USER MENU PROCEDURES

This section provides instructions for all of the User Menu procedures.

5.4.1 ID Number Entry (A8)

1. While in the User Menu mode, scroll to "**A 8**", then scroll down once using the 6 key to enter the ID Number menu.
2. The display will momentarily show "**ET ID**", followed by the current ID number value.
3. Use the front panel numeric keys to key-in the actual ID Number value. If you make a mistake, press the CLEAR key to clear your entry and start over.
4. After entering the exact value, press the SAMPLE / SAVE key to save the ID Number value. The display will show "**END ID**" momentarily, then revert back up to A8.

5.4.2 LF (Line Feeds) Number Entry (A9)

1. While in the User Menu mode, scroll to "**A 9**", then scroll down once using the 6 key to enter the Line Feeds menu.
2. The display will momentarily show "**ET LF**", followed by the current line feeds value.
3. Use the front panel numeric keys to key-in the actual line feeds value. If you make a mistake, press the CLEAR key to clear your entry and start over.
4. After entering the exact value, press the SAMPLE / SAVE key to save the line feeds value. The display will show "**END LF**" momentarily, then revert back up to A9.

CHAPTER 6: CALIBRATION

6.1 CALIBRATION OVERVIEW

Your S610 scale ships from the factory fully calibrated. There is no need to calibrate the scale unless you feel that it has become inaccurate. It is a good idea to check the calibration of your scale from time to time with a precision test weight. Salter Brecknell recommends that you perform a new calibration on your digital scale at least once a year.

During calibration, at least two values are saved in the scale's memory – the zero value (deadweight) and the up to three span values (test weights). See Table 6-1 for a listing of minimum and recommend test weights.

6.2 CALIBRATION MODE

1. Toggle the ON/OFF switch to the OFF (0) position.
2. Press and hold the ZERO key while powering back on the scale. When the scale shows "o Zone" you are in Calibration mode and you may release the ZERO key.
3. Press the SAMPLE / SAVE key. The scale shows briefly shows "C 0", then displays a value which remains on the screen. This value is for troubleshooting purposes only. Allow a 20-minute warm-up period for the load cell and electronic components to become thermally stable.
4. Remove all items from the scale's platter. Press ZERO to zero the value.
5. Press the SAMPLE / SAVE key to save the zero point value. The scale shows "0.000" or "0.0000" depending on scale capacity.
6. Use the numeric keys to enter the test weight value. Please note that the decimal point is fixed so that if you are entering, for example, 2 lb, you need to type "2" followed by zeroes until the "2" is to the left of the decimal point.
7. Place the test weight(s) onto the scale's platter, then press the SAMPLE / SAVE key. If the calibration was successful, the display will show "END C1" momentarily, then automatically enter Normal Operating Mode by performing a countdown test. Remove the test weight from the platter.

NOTE: If you encounter a failure, consult Appendix C for possible causes and remedies.

MODEL	Capacity / Graduation	Minimum Test Weight	Recommended Test Weight
S610-2	2 lb x 0.0002 lb	0.02 lb	2 lb
S610-5	5 lb x 0.0005 lb	0.05 lb	4 lb to 5 lb
S610-10	10 lb x 0.001 lb	0.1 lb	7 lb to 10 lb
S610-20	20 lb x 0.002 lb	0.2 lb	14 lb to 20 lb
S610-1M	1000 g x 0.1 g	10 g	1000 g
S610-2M	2000 g x 0.2 g	20 g	2000 g
S610-5M	5000 g x 0.5 g	50 g	4000 g to 5000 g
S610-10M	10,000 g x 1 g	100 g	7 kg to 10 kg

TABLE 6-1: Minimum / Recommended Calibration Test Weights

APPENDIX A: SPECIFICATIONS

CONSTRUCTION:

Housings: Tan ABS
Sub-Platform & Base: Metal
Platter: Tan ABS w/ Stainless Top
Feet: Non-skid Hard Rubber

DISPLAY:

6 Character, 7-Segment Red LED

KEYPAD:

20-key Silicon Rubber

OVER CAPACITY ANNUNCIATION:

103% of Full Scale Capacity

OPERATING TEMPERATURE RANGE:

32°F to 104°F
(0°C to 40°C)

POWER SOURCE:

AC Adapter, 9 VDC, 500 mA,
included


COM1 SERIAL PORT:

Full Duplex RS-232, DSUB9F

WEIGHT:

Net Weight: 4.0 lb (1.8 kg)
Shipping Weight: 7 lb (3.2 kg)

PHYSICAL DIMENSIONS:

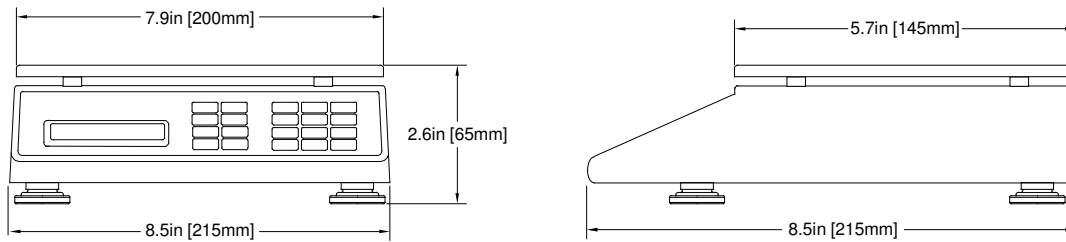

APPENDIX B: SERIAL PORT INFORMATION

B.1 COM1 SERIAL PORT

B.1.1 CONNECTING THE SERIAL DEVICE

The COM1 serial port is a full duplex RS-232 port designed for connection to one of the following devices:

- Serial receipt printer (dot matrix)
- Computer
- Remote display
- S630 or S650 Scale (to transmit APW)

Figure B-1 shows the serial port pinout. Figure B-2 shows a suggested cable diagram for a serial printer. Figure B-3 shows a suggested cable diagram for a PC-type computer. The cable shown in Figure B-3 is a standard Transcell cable – Model NMC-1.

1. Plug the serial device cable (not included) directly into the DSUB9 serial port connector.

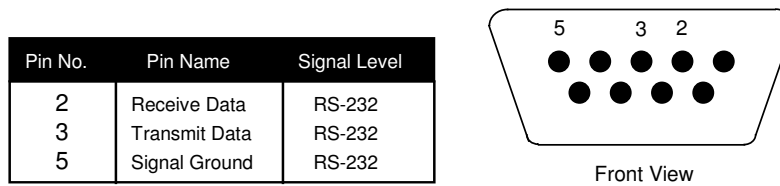


Figure B-1: Pin assignments for the COM1 serial port connector

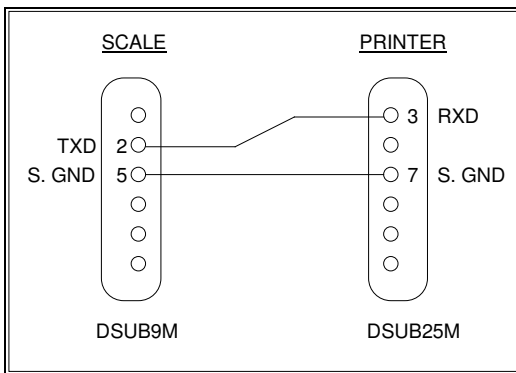


FIGURE B-2: Cable Diagram for Scale to Dot Matrix Printer

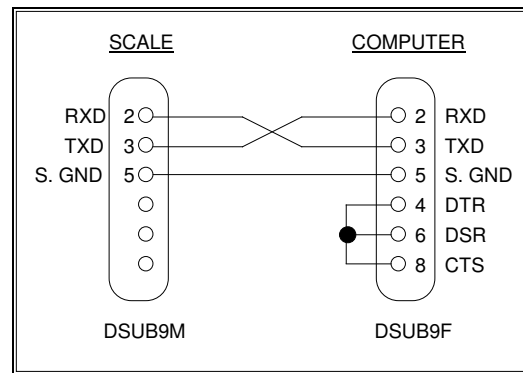


FIGURE B-3: Cable Diagram for Scale to Computer

B.1.2 DEFAULT PRINT FORMAT

Figure B-4 shows the fixed format of the print format. NOTE: The TARE and NET fields are blank when a tare has not yet been established in the system. The PCS field is blank when an APW has not yet been established in the system.

ID. NO.	123456
GROSS	5.000 LB
TARE	1.480 LB
NET	3.520 LB
PCS	3520

FIGURE B-4: Default Print Format

B.1.3 FULL DUPLEX MODES FOR COM1

B.1.3.1 DEMAND MODE

The Demand mode allows control from a host device, usually a PC, and can be activated by pressing the Print key. Figure B-5 shows the serial data format for the Demand Mode. Table B-1 shows the recognized host commands.

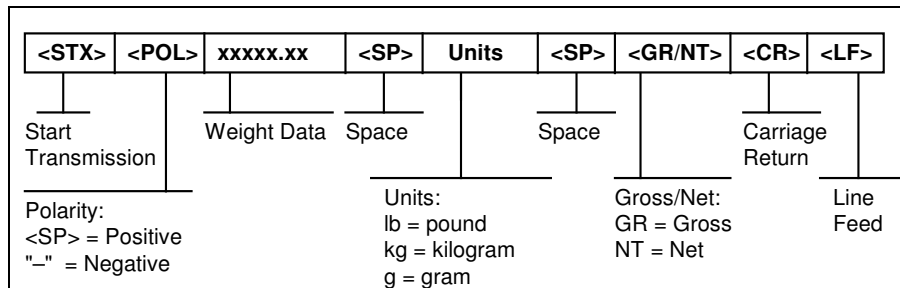


FIGURE B-5. Consolidated Controls Demand Mode

“P” - This command is sent to the scale to print the indicated display. The scale will not respond if the scale is in motion, positive overload or negative overload.

“Z” - This command is sent to the scale to zero the scale. If the scale is in motion, the scale will wait until a state of equilibrium is achieved. The scale will not respond at all if the scale is in positive overload or negative overload.

“T” - This command is sent to the scale to tare the scale. If the scale is in motion, the scale will wait until a state of equilibrium is achieved. The scale will not respond at all if the scale is in positive overload or negative overload. The scale will also not respond if it displaying a negative gross value.

TABLE B-1. Recognized Host Commands

B.1.3.2 CONTINUOUS MODE

The Demand mode is used to interface to computers, scoreboards and other remote devices requiring constant data updating. The transmission occurs at the end of each display update. Figure B-6 shows the serial data format for the Continuous Mode.

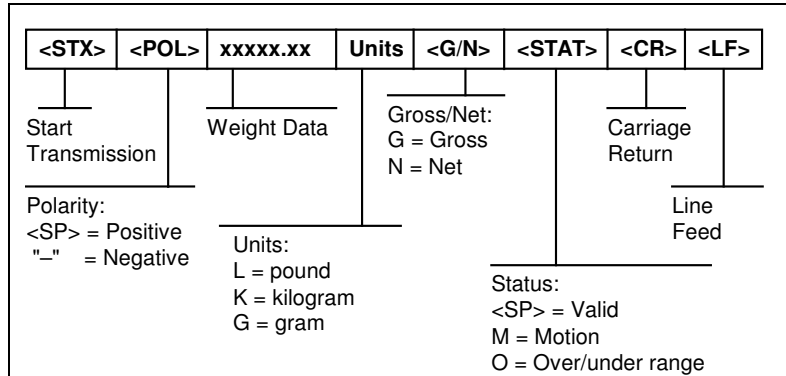


FIGURE B-6. Consolidated Controls Continuous Mode

B.1.4 TRANSMIT APW MODE

The Transmit APW Mode is designed specifically for connection to any of the following TC Series scale models:

- S630
- S650

Its purpose is to allow APW's derived on the S610 scale to be transmitted to a larger scale for actual piece counting there. Just press the PRINT key at any time on the S610 to initiate the transmission. Consult your S630 or S650 scale manual for more information.

APPENDIX C: ERROR MESSAGES

C.1 ERROR MESSAGES

If the scale encounters an error condition, it will display a message alerting the operator. A description of each display follows:

C.1.1 OPERATOR ERRORS

<i>Message</i>	Explanation
□□□□□□	A weight greater than the rated capacity has been applied to the scale. Remove the weight from the platter. Try re-calibrating the scale if this doesn't solve the problem. Otherwise, possible load cell damage due to overloading.
Err 9	Span calibration value has been lost. Re-calibrate scale.
Err 10	Sample weight is equal to or less than zero. Press the ZERO key then place items to be sampled onto the platter. It's possible that the items you are counting are too light for the scale to process at all.
Err 11	Keyed-in sample value is equal to zero or is a fractional value. Key-in a valid sample value.
Err 12	The APW of the items you wish to count is less than that listed in the table under "Piece Counting Operation".
Err 13	The total sample weight of the items you wish to count is less than that listed in the table under "Piece Counting Operation".
Err 14	The keyed-in value for APW is equal to zero. Key-in a valid APW value.
tErr 1	You have attempted to key-in a tare weight that is greater than the scale's full capacity. For example, for a 5 lb scale you cannot enter a value over 5 lb.
tErr 6	Indicates that the tare weight value you are entering is not rounded to the nearest scale division. For example, you cannot enter 0.001 lb for a 0.005 lb increment scale.

C.1.2 CALIBRATION ERRORS

Message	Explanation
Err 0	Indicates that the test weight value you have chosen exceeds the scale's capacity.
Err 1	Indicates that the test weight value you have chosen is less than 1% of the scale's capacity.
Err 2	Occurs when you do not place the test weight on the scale during calibration. Can also indicate that there is an internal error in the scale.